

TECHNICAL DATA SHEET

Butterfly valve
Elephant WBV3131x-2W-T-H DN15-100 10 bar
food grade stainless steel, threaded,
with handle






1. GENERAL PRODUCT INFORMATION

- 1.1 Product name: Butterfly valve Elephant WBV3131x-2W-T-H DN15-100 10 bar food grade stainless steel, threaded, with handle.
- 1.2 Purpose: Rotary disk gate valve is designed for use as shut-off or regulating valves for flow control in heat supply systems, water supply systems, in technological processes of food, chemical, oil and gas, pulp and paper and other industries.
- 1.3 Principle of operation: The valves are opened and closed by turning the disk by 90°. Opening is done by turning the handle counterclockwise, closing clockwise.





1.4. Deciphering the designation:

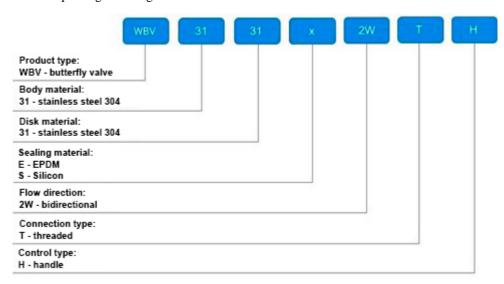



2. MAIN TECHNICAL DATA AND CHARACTERISTICS

Table 1. Basic parameters

Nominal diameter DN, mm	15 - 100
Nominal pressure, bar	10
Working medium temperature t, °C	EPDM: from -20 to +135 Silicon: from -50 to +180
Sterilization temperature, °C	+135 (max. 20 min.)
Working medium	cold and hot water, steam, other media neutral to materials of parts
Sealing material	EPDM or Silicon
Flow direction	double-sided
Control type	handle
Pipeline connection	threaded
Body material	food grade stainless steel AISI 304
Disk material	food grade stainless steel AISI 304
Scope of application	food production as well as industries with high requirements for sanitary control and cleanliness of equipment
Average life, number of closing/opening cycles	30,000 - 50,000 (depending on working environment and operating conditions)



3. BASIC PART MATERIALS

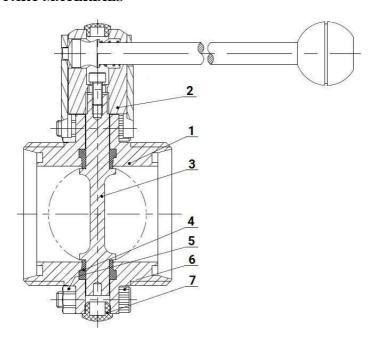


Table 2. Material specification

Nº	Part name	Material	
1	Body	stainless steel AISI 304	
2	Swivel unit stainless steel AISI 304		
3	Disk	stainless steel AISI 304	
4	Seat seal	EPDM or Silicon	
5	Nut	A2~70 steel	
6	Bolt	A2~70 steel	
7	Plug	ABS plastic	



4. WEIGHT AND DIMENSIONAL PARAMETERS

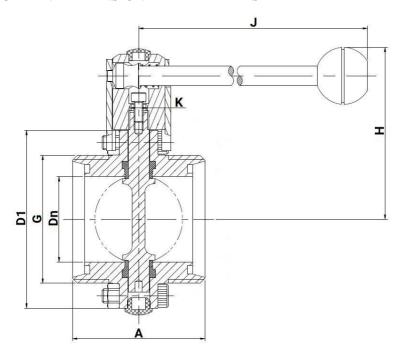


Table 3. Dimensional characteristics and weights

	Dn	G	D1	A	Н	J	K	Weight
				mm				kg
DN15	15	Rd34x1/8	78	66	86	126	8x8	1,18
DN20	19	Rd44x1/6	78	66	86	126	8x8	1,27
DN25	25	Rd52x1/6	78	66	86	126	8x8	1,29
DN32	31	Rd58x1/6	86	70	90	126	8x8	1,57
DN40	37	Rd65x1/6	90	74	92	126	8x8	1,70
DN50	49	Rd78x1/6	106	76	104	133	10x10	2,30
DN65	66	Rd95x1/6	124	80	113	144	10x10	2,90
DN80	81	Rd110x1/4	139	84	123,5	160	10x10	3,41
DN100	100	Rd130x1/4	159	104	133,5	160	10x10	4,95



Table 4. Value of torques and throughputs

	Torque values	Conditional flow capacity KV (for water with		
	for actuator selection, Nm	density 1000 kg/m3), m3/h		
DN15	10	8		
DN20	10	12		
DN25	10	15		
DN32	10	25		
DN40	10	40		
DN50	10	80		
DN65	20	131		
DN80	20	186		
DN100	20	257		

5. INSTALLATION AND OPERATING INSTRUCTIONS

- 5.1 Installation, operation and maintenance of the gate valves may be performed by personnel who have studied the gate valve design, safety rules, requirements of the installation, adjustment, operation and maintenance manual and who are certified for the relevant type of work.
- 5.2 The gate valves should be installed on pipelines for media and parameters specified in the product passport.
- 5.3 Pipelines should be cleaned (blown out) from dirt, sand, scale before installation.
- 5.4 Installation and dismantling of the product, as well as any repair or adjustment operations should be performed in the absence of pressure of the working medium in the system.
- 5.5 The pipeline shall be cleaned of dirt, sand, scale and any foreign objects before installation of the gate.
- 5.6 The gate shall not be subjected to loads from the pipeline (bending, compression, stretching, torsion, distortion, vibration, misalignment of spigots, uneven tightening of fasteners). If necessary, supports or compensators should be provided to reduce the load on the valve from the pipeline.
- 5.7 After installation it is necessary to check the gate operability by turning the handle, at that moving parts should move smoothly, without jerks and seizures.
- 5.8. Tightness tests should be performed in accordance with the procedure established at the enterprise.
- 5.9 During operation periodic inspections (routine work) should be carried out at the time established by the operating organization, depending on the system operation modes. During inspection check: general condition of the gate, condition of fastening connections, tightness of stem seals.



- 5.10. Sterilization (washing and disinfection) of gates should be carried out in accordance with the internal instructions of the enterprise.
- 5.11. The main types of gate cleaning are:
 - ultrasonic cleaning;
 - steam cleaning;
 - cleaning with water-soluble cleaning agents.
- 5.12. The most effective method is mechanized automatic washing and disinfection (CIP). CIP washing is the internal cleaning of equipment and piping networks without disassembly or opening of equipment with minimal (or no) manual labor. It involves irrigation of surfaces and circulation of cleaning solutions through this equipment at high turbulence and flow rates.
- 5.13. The food production enterprise develops instructions for washing and disinfection treatment of technological equipment, individual production areas, taking into account the specifics of production activities and used detergents and disinfectants.
- 5.14. Control is established over the availability of shipping documents and the availability of certificates of state registration for used detergents and disinfectants, taking into account their area of application.



6. CONDITIONS OF TRANSPORTATION AND STORAGE

- 6.1 Transportation and storage conditions comply with the internal instructions of the company.
- 6.2 The gates can be transported by any type of transport. At the same time, the gate must be installed on transportation means to exclude the possibility of mechanical damage, internal surfaces must be protected from contamination.
- 6.3 During transportation and storage the gate must be in the position of incomplete closing, i.e. the locking disk must be in loose contact with the collar surface without deformation of the rubber.
- 6.4 When loading and unloading, the gates should be slung by the body.
- 6.5 The gates should be stored in dry warehouses, protected from direct sunlight and at least 1 m away from heat-emitting devices, as well as not exposed to oil and gasoline.
- 6.6 During long-term storage of the gate valve it is necessary to inspect it periodically (at least twice a year), remove external dirt and rust, if necessary treat the seat seal with silicone spray lubricant.

7. UTILIZATION

- 7.1 The product is utilized in accordance with the procedure established at the enterprise (remelting, burial, resale).
- 7.2 Before sending for utilization, residues of the working medium shall be removed from the fitting. Methods of removal of the working medium and decontamination of the valve shall be approved in accordance with the established procedure at the enterprise operating the product.



8. WARRANTY OBLIGATIONS

- 8.1. Warranty period 12 months from the date of commissioning, but not more than 18 months from the date of sale.
- 8.2. The warranty applies to equipment installed and used in accordance with the installation instructions and product specifications described in this data sheet.
- 8.3. The manufacturer guarantees compliance of the product with safety requirements, provided that the consumer complies with the rules of transport, storage, installation and operation.
- 8.4. The warranty covers all defects caused by the fault of the manufacturer.
- 8.5. The warranty does not apply:
 - parts and materials of the product subject to wear and tear;
 - for cases of damage caused by:
 - modifications to the original design of the product;
 - violation of general installation recommendations;
 - faults caused by improper maintenance and storage; improper operation and use of the equipment.

9. WARRANTY TERMS

- 9.1. Claims to the quality of the goods may be made during the warranty period.
- 9.2. Defective products are repaired or exchanged for new ones free of charge during the warranty period. ELEPHANT decides whether to replace or repair the product. The replaced product or its parts resulting from the repair shall become the property of 'ELEPHANT'.
- 9.3. Costs related to dismantling, installation and transport of the defective product during the warranty period shall not be reimbursed to the Buyer.
- 9.4. If the claim is unfounded, the Buyer shall pay the costs of diagnostics and expertise of the product.
- 9.5. Products are accepted for warranty repair (as well as for return) fully assembled.



WARRANTY CARD №

№	Product Name	Packs
Name and add	dress of the trading organisation	
Date of sale _	Seller's signature	
Stamp or seal	of the trading organisation Acce	eptance stamp
	he terms and conditions of the warranty:(signature)	
Warranty peri from the date	iod - 12 months from the date of commissioning, but not me of sale.	ore than 18 months
	repairs, complaints and product quality claims, please contac ó,264,3-1,08007 Barcelona, Spain_E-mail address:_sales@va	
When making documents:	g a complaint about the quality of goods, the buyer shall pro	esent the following
1. A free-form	n application, which shall specify:	
•	 name of the organisation or full name of the buyer, actu telephone numbers; 	ial address, contact
•		
•	basic parameters of the system in which the product was	s used;
2 D	a brief description of the defect.	-4)
	confirming the purchase of the product (delivery note, receip raulic test of the system in which the product was installed.	ວເ).
	eted warranty card.	
	return or exchange of goods	
Date: « »	202 yr. Caption	

